MAINTENANCE SCHEDULE

Perform the PRE-RIDE INSPECTION in the Owner's Manual at each scheduled maintenance period.

1: Inspect and clean, adjust lubricate or replace if necessary.

C: Clean R:Replace A: Adjust L:Lubricate

The following Maintenance Schedule specifies all maintenance requird to keep your motorcycle in peak operating condition. Maintenance work should be performed in accordance with standards specifications of Honda by properly trained and equipped technicians. Your authorized Honda dealer meets all of these requirements.

FREQUENCY		WHICHEVER COMES FIRST	ODOMETER READING (NOTE 1)								
			×1,000 km ×1,000 mi MONTHS		6 4 6	12 8 12	18 12 18	24 16 24	30 20 30	36 24 36	Refer to page
ITEM											
*	THROTTLE OPERATION		n Ku			1		1		I	3-4
*	CARBURETOR CHOKE					1		1		1	3-5
*	AIR CLEANER	NOTE 2					R			R	3-6
	CRANKCASE BREATHER	NOTI	3		С	С	С	С	С	С	3-6
	SPARK PLUG					R		R		R	3-7
*	VALVE CLEARANCE						1			1	3-7
	ENGINE OIL			R		R		R		R	3-8
	ENGINE OIL FILTER			R		R		R		R	3-9
**	TIMING BELT		I EVERY 160,000 km (100,000 mi)					mi)	3-10		
*	CARBURETOR SYNCHRONIZATION					I		1		1	3-10
*	ENGINE IDLE SPEED			ı	1	1	ı	1	I	1	3-12
	RADIATOR COOLANT	NOT	E 4			1		ı		R	3-12
*	COOLING SYSTEM					1		1		1	3-12
*	SECONDARY AIR SUPPLY SYSTEM	NOT	E 5			ı		I		1	3-13
	FINAL DRIVE OIL					1.		I	1 1 1 10	R	3-14
	BRAKE FLUID	NOT	E 4		1	1	R	1	1	R	3-15
	BRAKE PAD WEAR				1	1	1	1	1	1	3-16
	BRAKE SYSTEM			1		10		1	116, 0	1	3-16
*	BRAKE LIGHT SWITCH					1		1		1	3-16
*	HEADLIGHT AIM					I		ı		1	3-17
	CLUTCH SYSTEM					1		1		1	3-17
	CLUTCH FLUID	NOT	E 4		1	1	R	ı	1	R	3-17
	SIDE STAND					ı		I		1	3-18
*	SUSPENSION	-				1		1		1	3-18
*	NUTS, BOLTS, FASTENERS		HARRIST OF THE CO.	ı		1		I			3-19
**	WHEELS/TIRES					l		I		1	3-19
**	STEERING HEAD BEARINGS			I		ı		I		1	3-19

^{*} Should be serviced by your authorized Honda dealer, unless the owner has proper tools and service data and is mechanically qualified.

Honda recommends that your authorized Honda dealer should road test your motorcycle after each periodic maintenance is carried out.

NOTES: 1. At higher odometer readings, repeat at the frequency interval established here.

- 2. Service more frequently when riding in unusually wet or dusty areas.
- 3. Service more frequently when riding in rain or at full throttle.
- 4. Replace every 2 years, or at indicated odometer interval, whichever comes first. Replacement requires mechanical skill.
- 5. SW and AR type only.

^{**} In the interest of safety, we recommend these items be serviced only by your authorized Honda dealer.